

 
### Overview:

The network installer has been simplified since SSS version 7.6. With SSS version 7.7, the only thing done on the server is the installation of a Network License Manager to activate your license. Then the SSS Client is installed on each user's computer and is pointed to the license manager server. This eliminates all of the network discovery challenges in past versions.


If you have a current SSS 7.6 network installation, go to the computer you set up the network installation on and uninstall SSS 7.6 from all client machines and the server. This can be done before or after following these instructions to do the new installation.

### Step 1 - Login or Create an Account at the ASI Portal:


**Login:** <https://portal.appliedscienceint.com/Account/Login>

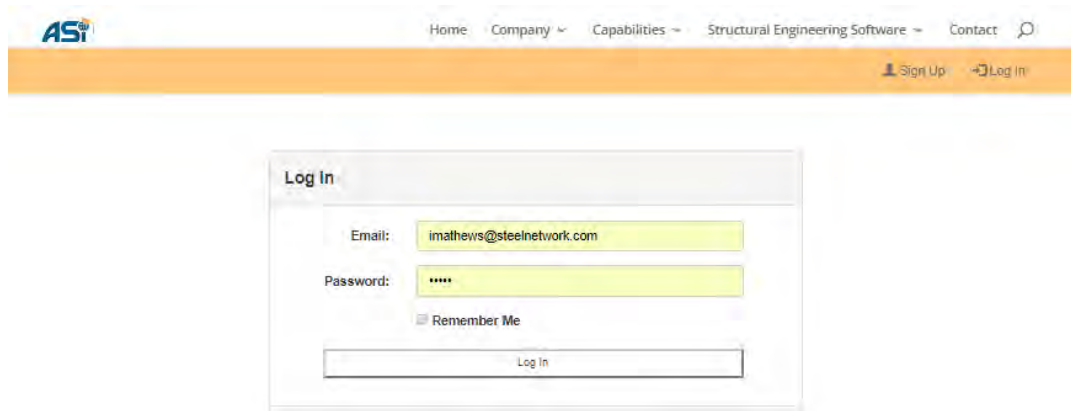

**Create Account:** <https://portal.appliedscienceint.com/Account/Register>


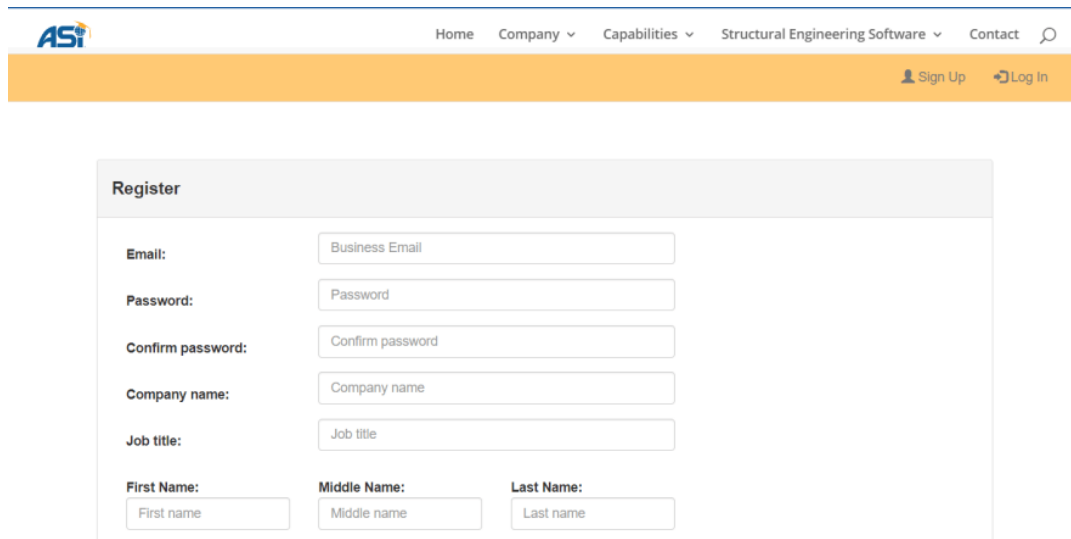


**Activate Account:** Check your Email for Activation Link from [support@appliedscienceint.com](mailto:support@appliedscienceint.com) and Follow Instructions

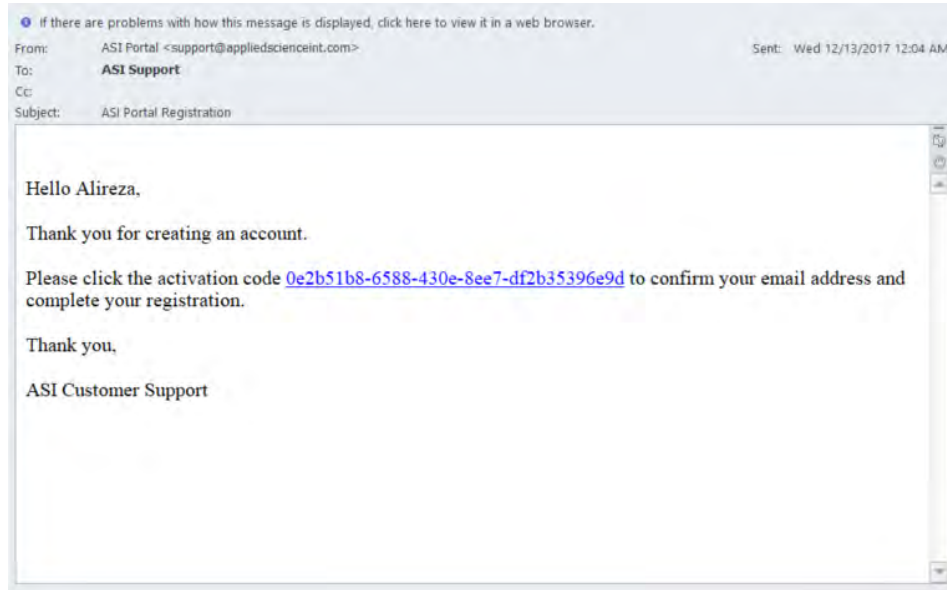



## Step 2 – Navigate to “Downloads” Tab and Download Desired Software

The installer will be located on the Download Tab. Once you’ve downloaded the installer, navigate to where you downloaded it to and unzip the download. Note: You will only see the download if you have an active subscription for the software. If your subscription has expired, renew your subscription through your account on the ASI Portal or contact your ASI Sales Representative.

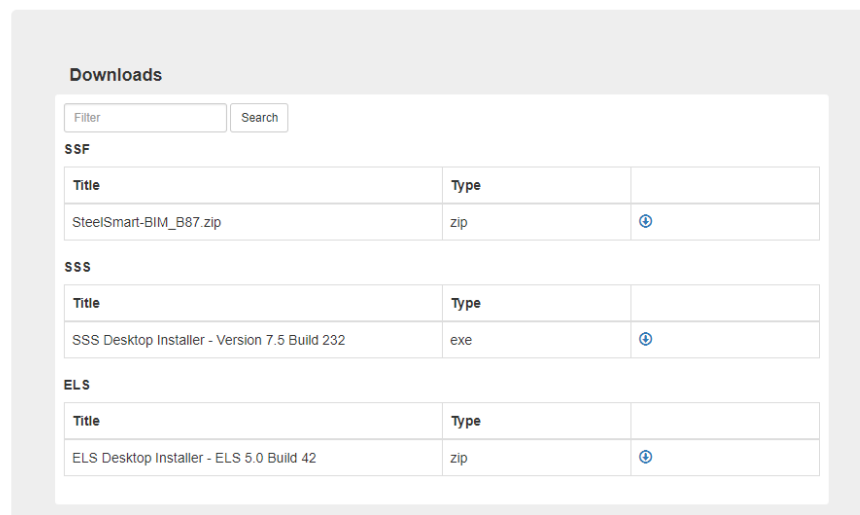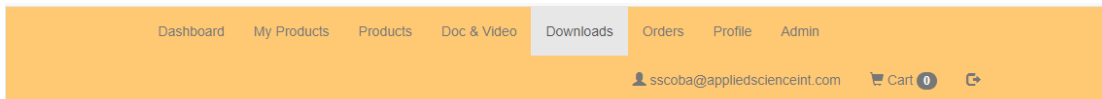


## Step 3 - Installing and Registering the Network License Manager:

 1. Unzip the SteelSmart System Network download
2. Run the **SSS\_Lic\_Mgr\_v1\_b1.exe** installer;  

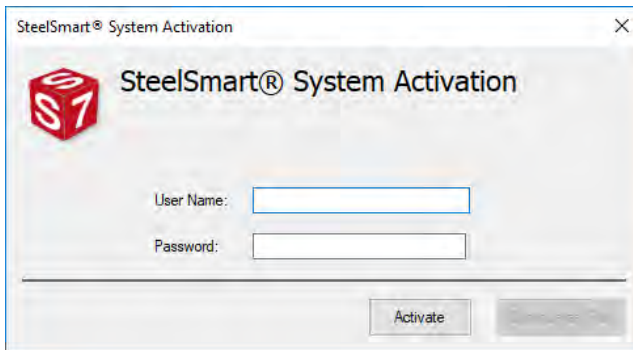3. Once installed, open the application
4. It will open the following GUI. Enter your current ASI Portal username and password for the account you purchased your license with and Click the Activate button.

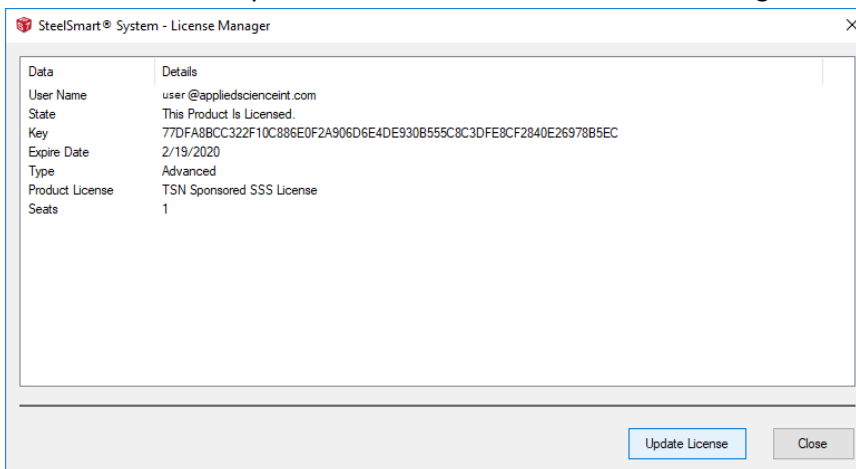


5. You should now see your license information similar to the image below




## Step 4 - Installing and Registering a Client Machine

 On any Client Machine, follow these steps to install the SSS Client and point to the SSS Network License Manager.


1. Run the **SSS\_Client\_v7.7\_b276.exe** installer.



2. Once installed, open the application from the icon on the desktop.

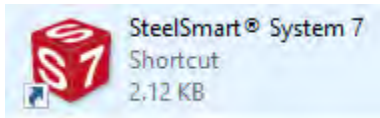

3. It will ask for the Server Name

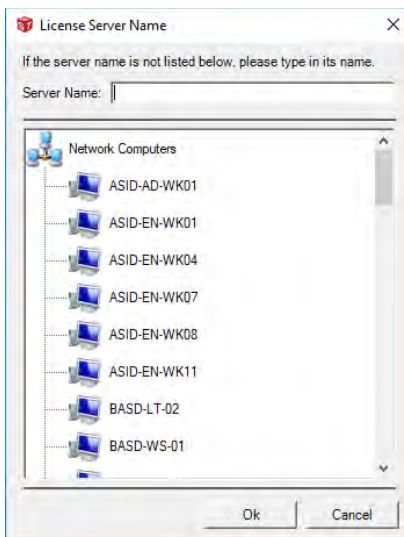

- a. Select your server name from the list or simply type its name in the server name box, and click OK.
  - b. Steel Smart® System Client Should run and display the remaining days for you license.
4. Repeat the installation process for all needed clients
  5. The Network license manager will allow the number of concurrent running client machines as your license purchased on the ASI Portal.

## Checking the License Server Name for a Client Machine

To check the License Server for a Client Machine, open the License Data dialog from the “About” screen and it will show the current registered license server name:

